

# **BROAN - SURFACESHIELD SERIES- BATHROOM FAN WITH UV LIGHT - INSTALLATION GUIDE**

# **ROOMSIDE SERIES FAN / LIGHT**

For Warranty Statement, Service Parts, Technical Support, or to Register your product, please visit our website or call: In the United States - Broan.com 800-637-1453 or NuTone.com 888-336-6151 In Canada - Broan.ca or NuTone.ca 877-896-1119

# **READ AND SAVE THESE INSTRUCTIONS** 🛆 🕰 WARNING

- A WARNING
  TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY
  TO PERSONS, OBSERVE THE FOLLOWING:
  ...
  ...
  ...
  the this unit only in the manner intended by the manufacturer.
  If you have questions, contact the manufacturer at the address
  or telephone number listed in the warranty.
- 2.
- or telephone number listed in the warranty. Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel. Installation work and electrical wiring must be done by a qualified means of the accerding with all amplicible codes and chardarrite. 3 person(s) in accordance with all applicable codes and standards.
- Including fire-rated construction Godes and standards. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturers guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities. Ducted fans must always be vented to the outdoors. Acceptable for use over a tub or shower when connected to a GFCI (Ground Fault Circuit Interrupter) protected branch circuit (ceiling installation only). including fire-rated construction codes and standards. 4
- 5. 6
- (ceiling installation only). This unit must be grounded. 8.

- 1. For general ven For general ventilating use only. Do not use to exhaust hazardous
- rol general vertiniting use only, but to use to exhaust nazarous or explosive materials and vapors. To avoid motor bearing damage and noisy and/or unbalanced impeliers, keep drywall spray, construction dust, etc. off power unit. Please read specification label on product for further information and convingente 2.
- 3. and requirements.


#### **CLEANING & MAINTENANCE**

For quiet and efficient operation, long life, and attractive appearance - lower or remove grille and vacuum interior of unit with the dusting brush attachment. The motor is permanently lubricated and never needs oiling. If the motor bearings are making excessive or unusual noises, replace the blower assembly (includes motor and impeller).


#### OPFRATION

Use a two-function control to operate this ventilator. See "Connect Wiring" for details.

#### ALL INSTALLATIONS Start here.

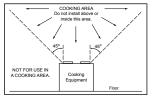

**P**-IMPORTANT - The ducting from this fan to the outside of the billing has a strong effect on the air flow, noise and energy use of the fan. Use the shortest, straightest duct routing possible for best performance, and avoid installing the fan with smaller ducts than recommended. Insulation around the ducts can reduce energy loss and inhibit mold growth. Fans installed with existing ducts may not achieve their rated airflow.

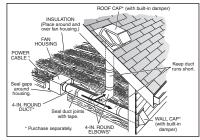

• OPTION - To mount housing anywhere between ceiling framing: Use optional Hanger Bar Kit (sold separately from local distributors or website). Follow mounting instructions included with kit.

Remove blower and all packing material 1. from fan housing.



#### 2. Remove wiring panel from fan housing (if already installed).



Ø

OUSING

TABS

For Retrofit Installation - Skip to back page. **NEW CONSTRUCTION INSTALLATION** 

#### 3. Attach damper/duct connector to fan housing.


Push connector through opening from inside of housing. Engage tabs and secure with screw from parts bag.

### 4. Mount housing to ceiling structure.

TABS

Make sure bottom of housing will be flush with finished ceiling. For proper location using 1/2" ceiling material: Bend ou housing tabs to fit against bottom of structure. Secure housing through mounting ears with appropriate fasteners. If mounting housing to I-joist, use wood blocking as shown.

5. Connect 4-in. round duct.

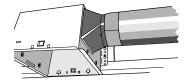







# **BROAN - SURFACESHIELD SERIES- BATHROOM** FAN WITH UV LIGHT - INSTALLATION GUIDE

6. Connect wiring.

Bend tab to expose desired access hole. Connect power cable to housing with appropriate UL approved connector. Connect black to black, white to white, black to red and green to green or bare wire. Re-install wiring panel and secure with screw from parts bag.



**RETROFIT INSTALLATION** ·

Enlarge ceiling opening (if necessary) to 9¾" parallel to joist) by 10½" (perpendicular to joist). (Some models have a cut-out template on side

of carton.) Leave ductwork and wiring in place.

1

4. Fold mounting ears flat against housing.


7. Finish ceiling - then skip to Step 8.

3. Remove old fan and prepare ceiling. Existing fan housings are typically attached to the structure: • with screws, nails, or staples, which must be removed. • with hangers or rails which are fastened to joists and must be removed along with housing. A pry bar may be needed to remove the old housing.

9¾



5. Connect wiring. Bend tab to expose desired access hole. Connect power cable to hole. Connect power cable to housing with appropriate UL approved connector. Connect black to black, white to white, black to red and green to green or bare wire. Re-install wiring panel and secure with screw from parts bag.

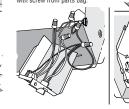

#### 6. Mount fan to ceiling structure.

Mount housing to ceiling structure with standard drywall or wood screws in locations shown. (Some models include mounting screws.) \*Center hole optional



### 7. Connect 4-in. round duct.

Pull existing ducting through housing discharge opening and tape ducting to duct connector. Push connector/ducting back through opening. Engage tabs and secure with screw from parts bag.







Re-install blower removed in Step 1. Secure blower with 2 screws from parts bag and plug blower into black receptacle.





# 9. Install grille.

Install 100W max, incandescent light bulb. Plug in light. Squeeze grille springs and insert into slots in housing. Push grille up against ceiling.





# WIRING DIAGRAM

